


# Spare wheel holder

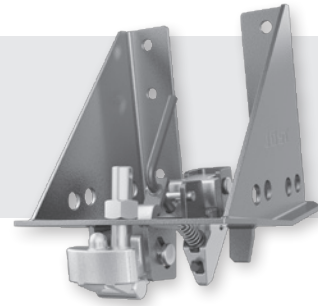

JOST spare wheel holders are used to mount spare truck wheels with press-in depth.

## Product overview spare wheel holder

Number of bolt holes piece	Bolt circle diameter (mm)	Centering diameter (mm)	Maximum rim width (mm)	Weight (kg)	Order No.	Drawing No.	Figure see page ...
6	205	161	12	8.5	ERH 6-205	902.011.000	121
6	245	202	12	8.6	ERH 6-245	902.013.000	121
8	275	221	16	14.3	ERH 8-275	902.014.000	121
10	335	281	16	16.4	ERH 10-335	902.012.000	121

Surface: housing raw, mounting parts galvanised

### Notes:

Refer to the installation instructions and the operating instructions.

The fixing elements are not supplied.

See maximum vehicle width!

The spare wheel holders are not suitable for aluminium wheel rims.