


Spare wheel holder

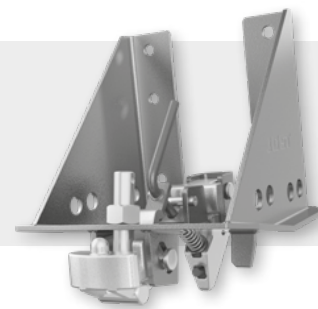

JOST spare wheel holders are used to mount spare truck wheels with wheel offset.

Product overview spare wheel holder

Number of bolt holes piece	Bolt circle diameter (mm)	Centering diameter (mm)	Maximum rim width (mm)	Weight (kg)	Order No.	Drawing No.	Figure see page ...
6	205	161	12	8.5	ERH 6-205	902.011.000	99
6	245	202	12	8.6	ERH 6-245	902.013.000	99
8	275	221	16	14.3	ERH 8-275	902.014.000	99
10	335	281	16	16.4	ERH 10-335	902.012.000	99

Surface: housing primed, mounting parts galvanised

Notes:

Refer to the installation instructions and the operating instructions.

The fixing elements are not supplied.

See maximum vehicle width!

The spare wheel holders are not suitable for aluminium wheel rims.